

Short description for Desktop Remote Control

M5



Volume

Adjust volume:

1. push button
2. select volume level 0-8 via the keypad

Transmit

Transmitting while PTT button is pressed (transmit indicator is lit)